 



**SOPORTE BÓVEDA ACCESORIO CARTELA SR + SOPORTE SR**



SR + Cartela



 Ángulo en parte superior





Ángulo en parte inferior

DESCRIPCION	B mm	H mm	A mm	e mm	Cartela CTA (kg)	GC	
						REF.	kg/ud
SopORTE SR 200	200	80	54	1,5	135	2/3460	0,61
SopORTE SR 300	300	80	54	1,5	120	2/1032	0,83
SopORTE SR 400	400	100	54	1,5	110	2/1033	1,22
SopORTE SR 500	500	100	54	1,5	100	2/1034	1,48
SopORTE SR 600	600	100	54	1,5	80	2/1035	1,84
Cartela SR	-	-	-	2	-	2/6828	0,35
Pasador SR (cinc)	-	-	-	-	-	2/6793	0,03


Se utiliza sobre bóvedas o planos inclinados con la Cartela SR.

Para el montaje con Cartela SR se requieren 1 Pasador SR 2/6793 y 2 conj. tornillo B2 referencia 2/6792 en GC ó 4 conj. tornillo B2 referencia 2/6792 en GC.

  Para más información consulte las fichas técnicas.



SR

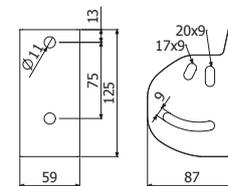

Cartela SR