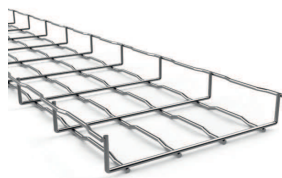


BASORFIL BFR H 1 1/2"


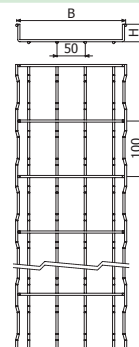
L = 10 FT / 3 m

DESCRIPTION	Width		SWL		ELECTROZINC		
	inch	mm	(Lbs/ft) d=5ft	(kg/m) d=1,5	REF.	kg/m	LBS/FT
BFR-4"x 1 1/2"	4"	100	12	18	2/3616	0,55	0,37
BFR-6"x 1 1/2"	6"	150	12	18	2/3617	0,67	0,45
BFR-8"x 1 1/2"	8"	200	12	18	2/3618	0,81	0,54
BFR-12"x 1 1/2"	12"	300	12	18	2/3619	1,27	0,85

To assemble the cable trays, it is necessary to use a bolt-staple set for each of the cable tray's side, with reference number 2/4364 in EZ and 2/4360 in HDG.

SWL = Safety Working Load.

drawn in mm.

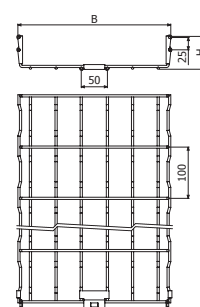

BASORFIL COUPLING SYSTEM BF2R H2"


L = 10 FT / 3 m

DESCRIPTION	Width		SWL		centerpiece	ELECTROZINC		
	inch	mm	(Lbs/ft) d=5ft	(kg/m) d=1,5	units	REF.	kg/m	LBS/FT
BF2R 2"x2"	2"	60	15	23	0	2/7389	0,57	0,38
BF2R 4"x2"	4"	100	30	45	0	2/7248	0,81	0,54
BF2R 6"x2"	6"	150	30	45	0	2/7249	0,86	0,57
BF2R 8"x2"	8"	200	30	45	0	2/7250	1,11	0,74
BF2R 12"x2"	12"	300	30	45	1	2/7251	1,62	1,08
BF2R 16"x2"	16"	400	30	45	1	2/7394	1,98	1,32
BF2R 20"x2"	20"	500	37	55	2	2/7395	2,76	1,84
BF2R 24"x2"	24"	600	37	55	2	2/7396	3,18	2,12

Self coupling system. For mounting the cable trays there is no need to use more items.

drawn in mm.

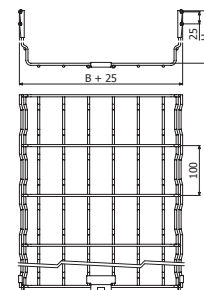

BASORFIL COUPLING SYSTEM BF2R H4"


L = 10 FT / 3 m

DESCRIPTION	Width		SWL		centerpiece	ELECTROZINC		
	inch	mm	(Lbs/ft) d=5ft	(kg/m) d=1,5	units	REF.	kg/m	LBS/FT
BF2R 8"x4"	8"	200	40	60	0	2/7397	1,62	1,08
BF2R 12"x4"	12"	300	40	60	1	2/7398	1,96	1,31
BF2R 16"x4"	16"	400	47	70	1	2/7399	2,76	1,84
BF2R 20"x4"	20"	500	47	70	2	2/7400	3,17	2,11
BF2R 24"x4"	24"	600	47	70	2	2/7401	3,59	2,39

Self coupling system. For mounting the cable trays there is no need to use more items.

drawn in mm.


BASORFIL BFR H 6"

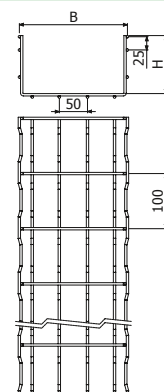

L = 10 FT / 3 m

DESCRIPTION	Width		SWL		ELECTROZINC		
	inch	mm	(Lbs/ft) d=5ft	(kg/m) d=1,5	REF.	kg/m	LBS/FT
BFR 8"x6"	8"	200	49	74	2/9549	1,90	1,27
BFR 12"x6"	12"	300	49	75	2/9550	2,46	1,65
BFR 16"x6"	16"	400	58	86	2/9551	2,83	1,90
BFR 20"x6"	20"	500	58	86	2/9552	3,20	2,14
BFR 24"x6"	24"	600	58	86	2/9553	3,57	2,35

To assemble cable trays with a width which is lower or equal to 200 mm, it's necessary to use a BF quick joint for each of the cable tray's side, with reference number 2/6217 in EZ and 2/6219 in HDG. For wider cable trays, an additional bolt-staple set shall be used as a central union joint, reference number 2/4364 in EZ and 2/4360 in HDG.

SWL = Safety Working Load.

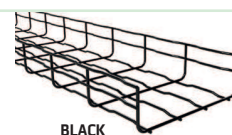
drawn in mm.


PAINT SERVICE YELLOW / RED / BLACK


YELLOW



RED



BLACK